

# SIMWATCH SSW02



# Content

- Model SIMWATCH SSW02
- Micro USB Cable
- User Guide
- Battery
- Stereo handfree

# Getting Started

- A Touch screen
- B Micro USB port
- C On / Off key
- D Microphone
- E Speaker



## Watch Display

Slide the analog watch face down to get to the main menu.  
On the top different icons appear.

- Signal strength
- New text message (SMS)
- Vibrate and ring
- Vibrate then ring
- Vibrate only
- Ring
- Alarm On
- Bluetooth On
- Bluetooth connected
- Headset inserted
- Missed call
- Battery strength



## Feature List

- Fully functioning phone
- Internet connection, through WAP 1.2.1
- MP3 / MP4 Player
- Video recorder
- Audio recorder
- Voice recorder
- Image viewer
- File manager
- Organizer
- Stopwatch
- Task list
- Alarm clock
- Calculator
- Bluetooth 3.0 capability
- SMS and MMS capability
- Phone book for up to 500 numbers
- Call history
- Capacitive touch screen
- Micro SD card slot up to 16GB
- Vibrate function
- Multiple languages available

## First Time Use

### Turn on the watch

To turn the phone on or off, press and hold the On/Off button on the side of the Smartwatch

 


Long press the On / Off key

### Insert a SIM Card

The Smartwatch allows you to store phone contact information on your Smartwatch itself or on a removable SIM card. To insert a SIM card into the Smartwatch, do the following:

1. Switch off the Smartwatch by pressing and holding the power button until the screen goes dark.

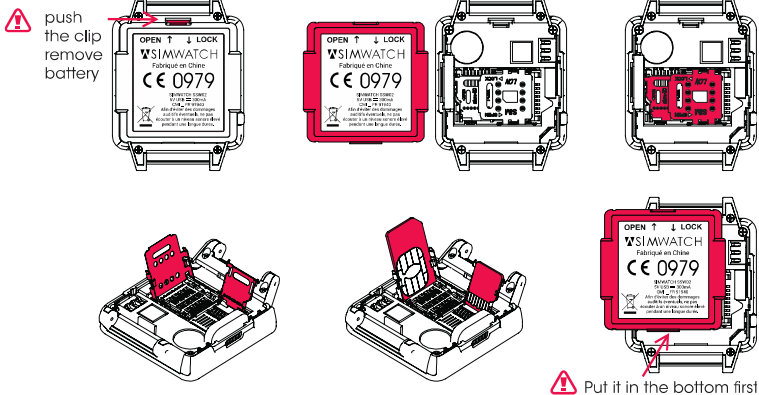

2. Turn the Smartwatch over and remove the back plate by lifting the handle up.
3. Open the top one of the two silver metal guards by gently lifting up on the left side.
4. Insert the SIM card into the slot.
5. Flip down the silver metal cover.
6. Replace the back plate. Put in the bottom part first and once the battery is in its place put down the handle to lock.

#### Important :

1. Smartwatch Operating Frequency is **GSM 2G 850/900/1800/1900**
2. If your card is PIN-locked your phone will display "card is locked". You must enter PIN before the phone can start working. Please contact your network service provider if you need

## Insert a Micro SD Card

The Smartwatch allows you to store music, videos, audio recordings, and other data on a removable micro SD card. To insert a micro SD card into the Smartwatch, do the following:




1. Switch off the Smartwatch by pressing and holding the power button until the screen goes dark.
2. Turn the Smartwatch over and remove the back plate by lifting the handle up.
3. Open the top one of the two silver metal guards by gently lifting up on the left side.
4. Open the lower one of the two silver metal guards by gently lifting it up from the top.
5. Insert the micro SD card into the slot.

6. Flip down both the silver metal covers.
7. Replace the back plate. Put in the bottom part first and once the battery is in its place put down the handle to lock

Reminder: Micro SD card is not included. Micro SD card is recommended to enjoy all the functions in the Smartwatch.


## Charge the Battery

The Smartwatch digital display screen tells you how of a charge is left in the battery.

-  0% remaining
-  50% remaining
-  100% (Fully charged)

To charge the Smartwatch battery, do the following:

1. Take the USB cable that came with the Smartwatch.

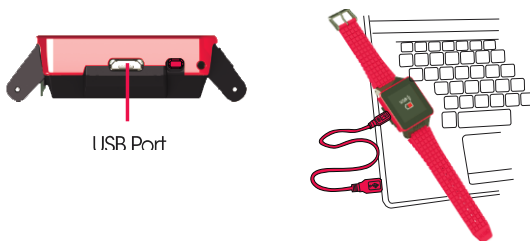

2. Insert the smaller end of the cable in the USB port on the left side of the Smartwatch.
3. Insert the larger end of the cable into a USB port on your computer, or another USB charger.

Connect data cable and charger, plug one end into your phone's USB port.  
Plug the other end of the charger into the appropriate electrical outlet (100~240VAC).

For first time use, charge the battery for at least 5 hours before use. When your smartwatch indicates that the battery is fully charged, remove the charger.

## Touch Screen Movements



 
There are three different types of movement to use the touchscreen: Click, Long press, and Slide

## Basic Screen Options

Sliding vertical from the main menu there are three different screens. Slide the menu up to get to the analog clock display.



When you slide the menu down you get to the toggle display. In the toggle display you can set three different fast settings.

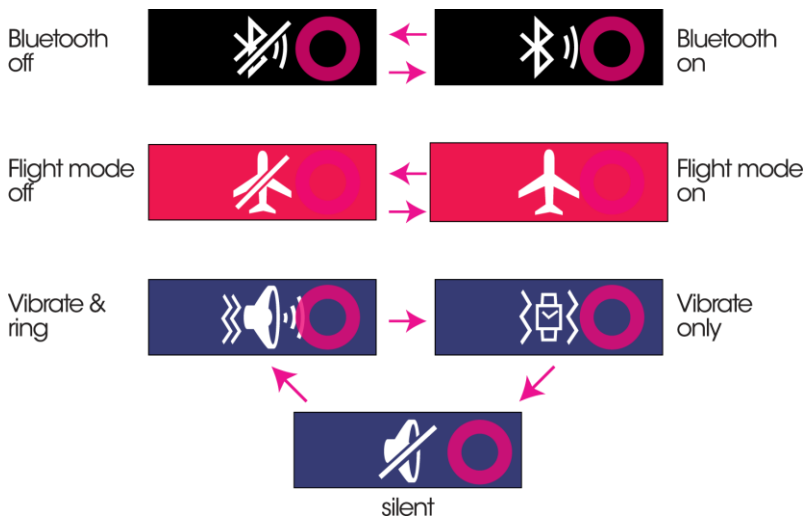


The Black slide is to switch Bluetooth on or off

The Red slide is to switch Flight Mode on or off

The Blue slide is to change the sound mode form Vibrant & ring to Vibrate only to Silent

 To access the interactive phone features of the Smartwatch, you can slide horizontally. There are three different levels for sliding in the menu.



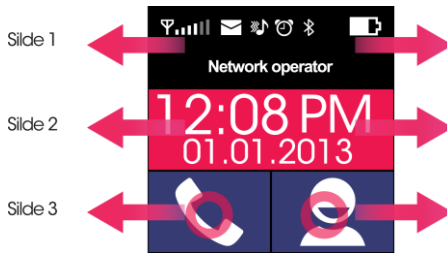

Slide 1 is for Messages, Calls and Settings

Slide 2 is for Multimedia. It consists of Photos, Music, Player, FM and Recorder

Slide 3 has two clickable buttons. On the left is the phone button and on the right the Contacts button. Slide 3 is also for File, Stopwatch, Alarm and Services.

## Smartwatch Features





## Manage SMS

All of the features listed in this section are available through the SMS menu on the Smartwatch. To access the SMS menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the top slide  
Tap the Messages menu that appears.

### Compose an SMS Message

To create an SMS message, do the following:

1. Tap the Messages menu.
2. Tap the Write message option in the menu.
3. Select Text message
4. Compose the text message you want to send.

**TIP:** Tap 'options' to change the input method.

5. Tap the Options button.
6. In the menu that appears, tap the Send to option.
7. Enter the recipient's number manually or select it using the 'Add from Phonebook' option.
8. Tap the Options button again.
9. Tap 'OK' to send the message.

### Go to Your Inbox

To view your SMS message inbox, do the following:

1. Tap the Messages menu.
2. Tap the Inbox option in the menu.

### View and Manage Sent Messages

To view and manage your sent messages, do the following:

1. Tap the Messages menu.

2. Tap the Sent messages option in the menu
3. Tap any message to access it.
4. Tap the Options menu to access
  - View
  - Reply
  - Call sender
  - Forward
  - Delete
  - Delete all

## View Draft Messages

To view your draft messages, do the following:

1. Tap the Messages menu.
2. Tap the Drafts option in the menu

## Change the Input Method Locally

**Note:** The following instructions explain how to change the input method for a specific SMS message as you are creating it. To change the default input method of the system, refer to the Settings section of this guide.

Changing the Input Method of an SMS message allows you to specify the language you want to create the message in, add numbers and symbols to the message, or write in all lowercase or all uppercase letters. To change the input method locally, do the following:

1. Tap the Messages menu.
2. Tap the Write message option in the menu.
3. Select Text message
4. Tap the Options button
5. Tap 'change input method' and tap the input method you want to use.

## View & Edit Profile Settings

To view and configure your profile settings, do the following:

1. Tap the Messages menu.
2. Tap 'Message Settings' in the menu.
3. Select 'Text message'
4. Select 'SIM message settings'

5. Select 'Profile settings'
6. Select the profile of your preference to 'edit' or 'activate'

## View & Edit Common Settings

To view and configure common settings, do the following:

1. Tap the Messages menu.
2. Tap 'Message Settings' in the menu.
3. Select 'Text message'
4. Select 'SIM message settings'
5. Select 'Common settings'
6. Turn on or turn off each of the following settings by tapping them and then tapping the  
On/Off button at the bottom of the screen:
  - Delivery path report
  - Reply path
  - Save sent messages
6. Tap the Done button when you are finished.

## View Memory Status

To view how much memory you have used on the phone and on your SIM card, do the following:

1. Tap the Messages menu.
2. Tap 'Message Settings' in the menu.
3. Select 'Text message'
4. Select 'SIM message settings'
5. Select 'Memory status'
6. The screen will refresh and display the percent of your SIM card memory and phone memory that is currently being used.
7. Click the Back button to exit the screen.

## Select a Preferred Storage Location

To designate a preference of where to store your SMS data, do the following:

1. Tap the 'Messages' menu.
2. Tap 'Message Settings' in the menu.
3. Select 'Text message'
4. Select 'SIM message settings'
5. In the menu that appears, tap the 'Preferred storage' option.
6. Tap either the Phone or SIM to designate where SMS data should be stored. The default of the watch is set to 'Phone'.

7. Click the OK button to save your choice.

## Select a Preferred Connection Type

To designate a preference of what type of connection to establish, do the following:

1. Tap the Messages menu.
2. Tap 'Message Settings' in the menu.
3. Select 'Text message'
4. Select 'SIM message settings'
5. In the menu that appears, tap the 'Preferred connection' option.
6. Tap one of the following radio button options:
  - Prefer GPRS
  - Prefer GSM
  - GSM Only
6. Click the OK button to save your choice.

## Manage MMS

All of the features listed in this section are available through the messages menu on the Smartwatch. To access the messages menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the top slide  
Tap the Messages menu that appears.

## MMS Definition

Multimedia Messaging Service (MMS) refers to messages that contain multimedia components such as pictures, audio files, video files, and attachments. They are different from SMS (Short Message Service) messages in that SMS messages support text-only and are limited to 160 characters, without attachments.

## Write and Send an MMS Message

To write and send an MMS message containing one or more slides, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the top slide
3. Tap the 'Messages' menu.
4. Tap the 'Write message' option in the menu.

5. Select 'Multimedia message'
6. Tap 'options' to add media
7. To add slides or to install slide time tap 'options' and select 'Slide options'
8. When you are finished tap 'options' and select 'send to' to send the message

Use the following menu options to create the main content of your MMS message:

- Send to – Tap this when you are done creating the MMS message
- Input method – Tap this to change the default character style or character set used to compose the message
- Add picture – Tap this to add a graphic file to the message
- Add sound – Tap this to add an audio file to the message
- Add video – Tap this to add a video file to the message
- Add subject
- Preview MMS – Tap this to view the message prior to sending it
- Slide options
- Advanced
- Save to drafts



## Manage Call History

All of the features listed in this section are available through the Call history menu on the Smartwatch. To access the Call history menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the top slide  
Tap the 'Call' menu that appears.

### View Missed Calls

To view a list of your missed calls, do the following:

1. Tap the 'Call' menu.
2. Tap the 'Missed calls' option.

### View Dialed Calls

To view a list of your dialed calls, do the following:

1. Tap the 'Call' menu.
2. Tap the 'Dialed calls' option in the menu that appears

### View Received Calls

To view a list of your received calls, do the following:

1. Tap the 'Call' menu.

2. Tap the 'Received calls' option in the menu that appears.

## Delete Call Logs

To delete your call logs, do the following:

1. Tap the 'Call' menu.
2. Tap the 'Delete call logs' option.
3. Tap the call log you want to delete—Missed, Dialed, Received or All calls —.
4. Tap 'yes' to confirm



## Settings

All of the features listed in this section are available through the Settings menu on the Smartwatch. To access the 'Settings' menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. Slide right in the top slide of the main menu  
Tap the 'Settings' menu that appears

## Phone Settings

### Time and Date

To set the time and date from the Settings menu, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Time and date' option.
4. Tap the 'Set home city' option to set your current city.
5. Tap the 'Set time/date' option.
6. Tap the HH:MM field then use the keypad at the bottom of the screen to enter the current hour and minute using the 24 hour clock should be entered as 16:00).
7. Tap the YYYY/MM/DD field, then use the keypad at the bottom of the screen to enter the current year, month, and day in the format YYYYMMDD.
8. Tap the 'Daylight saving' field, then select 'On' or 'Off' for Daylight savings.
9. Tap 'OK' to save your changes.
10. Tap the 'Set format' option.
11. In the Time field, select either 12 to display the hour as a numbers from 1 through 12 or select '24' to display the hour as a number from 1 through 24.
12. In the Date field, select the date format you want to use: MM DD YYYY, DD MMYYYY, or YYYY MM DD.
13. In the 'Date separator' field, select the separator you want to use between the month, date, and year. You can choose from the

following: slash (11/25/2012), hyphen (11-25-2012), period (11.25.2012), or colon (11:25:2012).

14. Tap 'OK' to save your changes.
15. Tap 'Back' to exit the Time and date options.

## Schedule Power On/Off

To schedule a time when you want the Smartwatch to turn on or off automatically,

do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Schedule power on/off' option to see all events: a red icon indicates a Power on event; a grey icon indicates a Power off event.
4. Tap the first entry in the list.
5. In the #1 Status field, select Disable to deactivate a scheduled power on/off event or Enable to activate one.
6. In the #2 field, select the type of event you want to create: Power on or Power off.
7. In the #3 field, set the time you want to have the event occur.
8. Tap 'OK' to save your changes

## Set the Default Language for the Smartwatch

To set the default language for all screens, menus, and options in the Smartwatch,

do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Language' option to view the list of languages supported by the Smartwatch.
4. Select the new default language you want to use and tap 'OK'.

## Set the Preferred Input Method

Changing the preferred input method of the Smartwatch allows you to specify the

default character set that will be made available when entering text into any fields

within the Smartwatch. The default character set can contain all lowercase letters,

all uppercase letters, all numbers, or the unique set of characters used to write text

in languages like Russian, Chinese, or Arabic.

To set the preferred input method, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.



3. Tap the 'Pref. input method' option to view the list of input methods supported by the Smartwatch.
4. Tap the input method you want to set as the default
5. Tap 'OK' to save your selection.

## Configure the Display Screen

To configure what appears on the Smartwatch display screen, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Display' option and then tap any or all of the following options to configure them:
  - Wallpaper – Allows you to select an image to be used as wallpaper for your Smartwatch display.
  - Screen saver – Allows you to select an image that will appear when the Smartwatch display is left idle.
  - Theme – Allows you to select a color for all the menus to be in.
  - Idle clock bg style – Allows you to select the style and color of the (analog) clock that appears on the the startup screen.
4. Needle style –Allows you to select the style and color of the needles of the (analog) clock that appears on the startup screen
5. Tap 'Back' when you are done.

## Turn On/Off Flight Mode

To turn flight mode on or off for the Smartwatch, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Flight mode' option to see whether it is currently turned on or off.
4. Tap one of the following options:
  - Normal mode This turns flight mode OFF
  - Flight mode This turns flight mode ON and causes the words "Flight mode" to appear on the digital display.
5. Tap 'Back' to save your changes.

**TIP:** Flight mode can also be set in the toggle settings, from the main menu slide down.

## Misc Settings: Configure LCD Backlight

To configure the brightness and display time of the LCD backlight, do the following:

1. Tap the 'Settings' menu.
2. Tap the 'Phone settings' option.
3. Tap the 'Misc. settings' option.
4. Tap the 'LCD backlight' option.
5. Move the Brightness slider to the left, to dim the display, or to the right, to make it brighter.
6. Move the Time slider to designate how many seconds the LCD backlight should remain on.
7. Tap 'OK' to save your changes

## Profile

### List of Profiles

The Smartwatch comes with 5 pre-set profiles:

- General
- Silent
- Meeting
- Outdoor
- My Style

**TIP:** Silent mode can also be set in the toggle settings, from the main menu slide down.

### Customize

Each of the pre-set profiles can be configured to suit your needs by doing the following:

1. Push the power button on the left side of the Smartwatch
2. Slide right in the top side of the main menu
3. Tap 'Settings'
4. Tap 'Profiles'
5. Tap the profile you want to configure.
6. Tap 'options' and select 'customize'

Note: the silent profile cannot be customized

7. Tap 'Alert type' to designate whether you want to be alerted to new calls or messages by ringing only, vibrating only, vibrating and then ringing, or vibrating while ringing.
8. Tap 'Ring type' to designate whether you want a single ring, repeated ringing, or ascending ringing (growing louder).
9. Tap 'Ringtone volume' to designate the volume of the ringtone and of the keys when the keypad is tapped.
10. (Optional) Tap Extra tone if you want to designate additional instances where tones will be played, such as when the Smartwatch sends a warning or error, when camp on<?> is enabled, or when connecting.
11. When you have finished tap 'back'
12. If you want the profile you just customized to be the active one, tap 'options' and 'activate'.

## Network Settings

### Network Selection

To configure the Network Selection option, do the following:

1. Tap the Settings menu.

2. Tap the Network settings option.
3. Tap the SIM network settings option.
4. Tap 'New Search' to search for a different network.
5. Tap 'Select network' to select a network from the list.
6. Tap 'Selection mode' to set the selection mode as automatic or manual.
7. Tap 'back' to save your changes.

## Preferences

To configure the Preferences option, do the following:

1. Tap the Settings menu.
2. Tap the Net settings option.
3. Tap the SIM network settings option.
4. Tap the Preferences option.
5. On the screen that appears, tap the name of the network that you want to set as the preferred network in the system.
6. Tap 'Back' to exit the screen.
7. Tap 'Back' again to save your changes.

## Security Settings

1. Tap the Settings menu.
2. Tap the Security settings option.

The following Security Settings are used to lock down different aspects of your Smartwatch:

- SIM security – To install a PIN lock and to change the PIN on your SIM card
- Phone Security
- Phone lock – To lock/unlock the phone, enter the default password 1122 or create your own password using the Change Password function in the list.
- Change Password—Use this option to change the SIM Lock password or the phone password for your Smartwatch.

## Reset Factory Settings

To reset your Smartwatch so that all of your settings are replaced by the default settings that were in place when the Smartwatch was new, do the following:

1. Tap the Settings menu.
2. Tap the Restore factory settings option.
3. Type the Smartwatch password '1122'

Note: This is a security feature that prevents unauthorized users from erasing all of your settings without your permission.

4. Tap 'Yes' to confirm that you want to reset the Smartwatch to its factory settings

# Manage Bluetooth

All of the features listed in this section are available through the Bluetooth menu on the Smartwatch. To access the Bluetooth menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide right in the top slide and tap 'Settings'
3. Select 'connectivity' in the menu that appears
4. Select 'Bluetooth'

## Turn On/Off Power

To activate/deactivate the Bluetooth feature, do the following

1. Go to the Bluetooth menu
2. Tap the Power button in the menu
3. Select 'On' or 'Off' to activate/deactivate

**TIP:** For turning on/off Bluetooth quick: Slide down the main menu to get to toggle functions. Tap the top button to activate/deactivate Bluetooth.

## Turn On/Off Smartwatch Visibility to Bluetooth Devices

To make the Smartwatch visible to Bluetooth devices, do the following

1. Go to the Bluetooth menu
2. Tap the Visibility button in the menu

## Search

To search for a Bluetooth device in the vicinity of the Smartwatch, do the following

1. Go to the Bluetooth menu
2. Tap 'Search audio device'

## Assign a Name to Your Bluetooth Device

To associate a name with the Bluetooth device, do the following

1. Go to the Bluetooth menu
2. Tap the My name option in the menu
3. Enter the name you want to use to identify the Bluetooth.
4. Tap the Options button.
5. Select the Done option in the menu that appears.

## Advanced

The Smartwatch also provides four advanced Bluetooth features, all of which can be

accessed by doing the following:

1. Go to the Bluetooth menu
2. Select the Advanced option in the menu

#### Advanced Option 1: Audio path

The Audio path option allows you to designate where you want audio path information stored. The two options are:

- Leave in phone
- Forward to Bluetooth headset

#### Advanced Option 2: Storage

The Storage option allows you to designate where you want Bluetooth data to be stored. The three options are:

- Phone
- Memory card

#### Advanced Option 4: My address

The 'My address' option displays the Smartwatch's network address, which is used by your Bluetooth device when pairing up.

## Manage Multimedia

Your Smartwatch comes with an audio player, video player, FM radio, sound recorder, and image viewer, all of which are available through the Multimedia menu on the Smartwatch. To access the Multimedia menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. The middle slide in the main menu is for Multimedia



## Audio Player

1. Push the power button on the left side of the Smartwatch

2. In the main menu, slide left in the middle slide and tap 'Music' The Smartwatch audio player allows you to play MP3s and MP4s that are stored directly on your Smartwatch or on a Micro SD (memory) card that you have inserted into the Smartwatch.

## Create and Configure the Audio Player List

To add files to the list, do the following:

1. Connect the Smartwatch to the computer through USB
2. Tap 'OK'
3. On your computer open the Smartwatch folder to view the files.
4. You will see three folders  
My Music  
Photos  
Videos
5. Select 'My music'
6. Add the .mp3 or .mp4 files that you want to add to your playlist in this folder.
7. Disconnect the Smartwatch and the computer
8. The music is now added to your audio playlist and will appear when you open the audio player in the multimedia menu.

## Play an Audio File

To play an audio file, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the middle slide and tap 'Music'
3. Slide the audio player up to get to the playlist
4. Tap the name of the audio file that you want to listen to.
5. In the list that appears, tap 'Play'.

The file will begin to play. When the song is finished, the Audio Player will automatically play the next file in the list or a random file if shuffle mode is turned on.

## View Details of an Audio File

To view the details of an audio file, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the middle slide and tap 'Music'
3. Slide the audio player up to get to the playlist
4. Tap the name of the audio file whose details you to view.
5. In the list that appears, tap 'Details'.
6. The screen that appears lists the following information about the file:
  - Size
  - Time (length of the song)
  - Title
  - Artist
  - Genre
  - Year

## Configure Bluetooth Settings for Audio Files

To configure the way your Bluetooth device handles audio files, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the middle slide and tap 'Music'
3. Slide the audio player up to get to the playlist
4. Tap the Options button.
5. Tap the Settings option in the list.
6. Tap the Bluetooth settings option.
7. In the BT stereo output field, select either 'Off' or 'On'.

**TIP:** For the best sound quality, if possible always select BT stereo output 'On'.



## Image Viewer

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'

The Smartwatch image viewer allows you to view and manage the photos you save on your phone or SD card

### View an Image

To view an image, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image you want to view.
4. Tap View to see the image.
- 5.

### View Image Information

To view information for any image, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image whose information you want to view.
4. Select 'image information' to view extensive details about the image.
- 5.

### Change Image Display Style

To change the way images are displayed in the Image Viewer, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the Options button.

4. Tap the Browse style option.
5. Select from one of the following options: 'List style' or 'Matrix style'.

## Send an Image

To send an image, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image you want to send.
4. Tap 'options'
5. Select 'Send'
6. Follow the prompts to create the multimedia or Bluetooth message.

## Use Image

To use one of your images as a default image within the Smartwatch, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image you want to use.
4. Tap 'options'
5. Select 'use as'
6. Select from the following list of uses for the image:
  - Wallpaper
  - Screen saver
7. Tap 'OK' to save your selection.

## Rename an Image

To rename an image, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image you want to rename.
4. Tap 'options'
5. Select 'rename'
6. When you are finished, tap the Options button.
7. Tap 'Done' to save the new name.

## Delete an Image

To delete a single image, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap the image you want to delete.
4. Tap 'options'
5. Select 'delete'
6. Tap 'Yes' to confirm that you want to delete the image.

## Delete All Images

To delete all images stored on your phone or on your MicroSD card, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'



3. Tap 'options'
4. Select 'delete all images'
5. Tap 'Yes' to confirm that you want to delete all of the images.

## Sort Images

To sort the images in your list, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the middle slide and tap 'Photos'
3. Tap 'options'
4. Select 'sort by'
5. Select from any of the following options as your sort criteria:
  - Name – Sorts your images alphabetically.
  - Type – Sorts your images based on the format.
  - Time – Sorts by the time and date each image was taken.
  - Size – Sorts by the file size of each image.
  - None – Does not officially sort the images. New images are simply added to the bottom of the list.
6. Tap the OK button to sort the image list.



## Video Player

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'

The Smartwatch video player displays a list of all videos stored on your phone or on

a MicroSD memory card you inserted into the phone. The video player allows you to

play, send, rename, delete, and sort your videos using a single menu.

## Play a Video

To play a video, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. In the list of videos that appears, tap the one that you want to Smartwatch.
4. Tap the Play option.
5. On the video screen that opens, tap the Play button.
6. Tap on the video to make it fullscreen.

## Send a Video

To send a video, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. In the list of videos that appears, tap the one that you want to send.
4. Tap the Send option.
5. In the list that appears, tap one of the following options: As multimedia message or Via Bluetooth.
6. Follow the prompts to create the multimedia or Bluetooth message.  
Rename a Video

To rename a video, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. In the list of videos that appears, tap the one that you want to rename.
4. Tap the Rename option.
5. When you are finished, tap the Options button.
6. Tap 'Done' to save the new name.

## Delete a Single Video

To delete a single video, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. Select the video you want to delete.
4. Tap the Options button in the bottom left corner of the screen.
5. Tap the Delete button.
6. Tap 'Yes' to confirm that you want to delete the video.

## Delete All Videos

To delete all videos in the your Smartwatch, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. Tap the Options button in the bottom left corner of the screen.
4. Tap the Delete all files button.
5. Tap 'Yes' to confirm that you want to delete all of the videos in the list.

## Sort Your Video List

To sort the videos in your list, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 3x in the middle slide and tap 'Videos'
3. Tap the Options button in the bottom left corner of the screen.
4. Tap the Sort by button.
5. Select from one of the following options as your sort criteria:
  - Name – Sorts your videos alphabetically.
  - Type – Sorts your videos based on the format of the video.  
(The default format is .3gp.)
  - Time – Sorts by the time and date each video was created.
  - Size – Sorts by the file size of each video.

- None – Does not officially sort the videos. New videos are simply added to the bottom of the list.
6. Tap the OK button to sort your videos.
  7. Tap 'OK' to save your changes



## FM Radio

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide right 2x in the middle slide and tap 'FM'
3. Insert the headset. (the headset will work as a satellite)
4. Search manually for the next frequency with the 'next' and 'previous' icon
5. Control the volume with the + and - icons
6. Tap the 'tools' icon in the top right corner to set quick settings
7. Slide the player up to go to the options menu
8. Tap 'Channel list' to see your channels and tap 'select>options>edit' to edit the channels.
9. Tap 'Auto search' to auto search and save channels



## Sound Recorder

The Smartwatch sound recorder allows you to make audio recordings and store them on the phone or on your memory card.

### Create a Sound Recording

To create a sound recording, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide right in the middle slide and tap 'Sound'
3. Tap the red Record button in the bottom left corner.
4. (Optional) Tap the Pause button at any time to pause the recording.
5. Tap the Stop button when you are finished recording.

6. Select 'yes' if you want to save the recording or 'no' if you want to delete it.

## View Your List of Sound Recordings

To view your list of sound recordings, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the bottom slide and tap 'File'
3. Tap 'phone'
4. Tap 'Audio'.
5. You have a list of your recorded files

## Send a Sound Recording

To send a sound recording, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the bottom slide and tap 'File'
3. Tap 'phone'
4. Tap 'Audio'.
5. Choose the file you want to send
6. Tap 'options' and select 'send'.
7. Follow the prompts to create the multimedia or Bluetooth message.

## Delete a Sound Recording

To delete a sound recording, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the bottom slide and tap 'File'
3. Tap 'phone'
4. Tap 'Audio'.
5. Choose the file you want to delete
6. Tap 'options' and select 'delete'.
7. Tap 'yes' to delete the file

## Delete All Sound Recordings

To delete all sound recordings stored on your phone or on the MicroSD card, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the bottom slide and tap 'File'
3. Tap 'phone'
4. Tap 'Audio'.
5. Tap 'options' and select 'delete all'.
6. Tap 'yes' to delete all audio files

## Add an Audio File as your Ringtone.

To add an audio file as your ringtone, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide right in the bottom slide and tap 'File'

3. Tap 'phone'
4. Tap 'Audio'.
5. Choose the file you want to set as your ringtone
6. Tap 'options' and select 'use as'.
7. Select 'Incoming call'



## Make and Manage Calls

### Make a Call By Dialing a Number

To make a call, do the following:

1. Push the power button on the left side of the Smartwatch.
2. Tap the phone icon in the lower left corner
3. Insert the phone number
4. Tap the call button in the lower left corner of the screen to initiate the call.

### Make a Call By Selecting a Contact

To make a call by selecting a contact, do the following:

1. Push the power button on the left side of the Smartwatch.
2. Tap the contact icon in the lower right corner
3. Tap the name of the contact you want to call.
4. In the menu that appears, tap 'Call' to call the contact.

### Make a Call By Selecting a Recently Dialed Number

To make a call by selecting a recently dialed number, do the following:

1. Push the power button on the left side of the Smartwatch.
2. Tap the phone icon in the lower left corner
3. Tap the green call button in the top left corner of the screen.
4. In the list of recently dialed numbers that appears, tap the name of the person you want to call.
5. In the menu that appears, tap 'Call'.

### Answer a Call

To answer an incoming call, tap the green answer button that appears on the left.

### Reject an Incoming Call

To reject an incoming call, tap the red Reject button that appears on the right.

## End a Call

To hang up at the end of a call, press the red End Call icon in the middle of the screen.

## Check Voicemail

When you miss a call and someone leaves a message on your voicemail, a "New voicemail" graphic will appear on the display screen. To check your voicemail, do the following:

1. Tap the New voicemail graphic.
2. Tap the Back button.
3. Tap the Call button.
4. Press and hold the 1 key on the keypad and the voicemail message will begin playing.

Note: To view the number keypad as the message is playing, tap the phone icon in the bottom center of the screen. With the keypad visible and the message playing, you can do any of the following:

- Tap 7 to delete the current message.
- Tap 9 to save it in the archives.
- Tap 4 to replay the message.
- Tap 5 to hear the envelope information for the message.
- Tap 6 to send a copy of the message to someone else with your remarks.

## View missed Call Details

To view details about a voicemail call, do the following:

1. Tap the missed call graphic.
2. Tap the View button.
3. Tap the name of the person who called.
4. Tap View to see the following information:
  - The type of call
  - The name of the caller
  - The calling number
  - The time and date of the call
  - The duration of the call
  - The total number of times the person called.

## Adjust the Volume During a Call

To adjust the volume during a call, do the following:

1. Tap the Option button.
2. In the menu that appears, tap the Volume option.

3. Increase the volume by tapping the + button or decrease it by tapping the – button.

## Manage Call Waiting

To manage call waiting, do the following:

1. Tap the Option button.
2. In the menu that appears, tap the Hold single call option.



## Manage Contacts

All of the features listed in this section are available through the Contacts menu on the Smartwatch. To access the Contacts menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. Tap the Contacts icon in the lower right corner of the screen.

## View Your Contact List

To view your Contacts List, do the following:

1. Tap the Contacts menu.
2. On the Contacts screen that appears, tap the ▲ and ▼ buttons to scroll up and down through the list.

## Add a Contact

To add a contact to your Contacts list, do the following:

1. Tap the Contacts menu.
2. Tap the Add new contact option at the top of the screen.

**Note:** The System Default setting is “Phone storage”, when the Phone storage is full ,you may need to clean up your message in the phone storage setting

3. Enter the name of the contact.
4. Tap the ▼ button to go to #2, the phone number entry field.
5. Enter the number of the contact.

Note: If you are importing the contact instead of entering it manually, skip Steps

5 and 6 and tap the ▼ button to go to #3, where you will navigate to ringtone Information

6. Tap the ▼ button to go to #3, the ringtone field.
7. Select the ringtone you want to associate with the new contact.
8. Tap the Options button at the bottom right corner of the screen.
9. Tap 'OK' and then tap 'Yes' to confirm that you want to add the contact to the list.

**Caution:** Smartwatch is not support to assign the Picture in the phone book contact

## Edit a Contact

To edit a contact's details in your Contacts list, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose information you want to edit.
3. Select 'Edit' from the menu that appears.
4. Use the ▼ button to modify the name of the contact, the contact's number, and/or the ringtone that accompanies their calls.
5. When you are done, tap the Options button at the bottom right corner of the screen.
6. Tap 'OK' and then tap 'Yes' to confirm that you want to save your changes. Delete a Contact

To delete a contact from your Contacts list, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact you want to delete.
3. Select 'Delete' from the menu that appears.
4. Tap 'Yes' to confirm that you want to delete the contact.

## Send a Text Message to a Contact

To send a text message to a contact via the Contacts screen, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact you will be sending a text message to.
3. Tap the 'Send text message' option in the list that appears.

**TIP:** To change the input method of the message, go to options and tap 'change input method' in the menu that appears.

4. Tap the Options button and select 'send to'
5. Select the name of the contact you want to send the text message to.

## Send a Multimedia Message to a Contact

To send a multimedia message to a contact via the Contacts screen, do the



following:

1. Tap the Contacts menu.
2. Tap the name of the contact you will be sending a multimedia message to.
3. Tap the Send multimedia message option in the list that appears.
4. Create your message.
5. Tap the Options button and select 'Send to'
6. Select the name of the contact you want to send the text message to.

## Copy a Contact or All Contacts

To copy a single contact's details to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose information you want to copy.
3. Tap 'Copy' from the list that appears.
4. Tap 'To phone' to copy the contact details to your phone.
5. Tap 'Yes' to confirm that you want to copy the contact.

To copy all of your contacts to your phone or to your SIM card, do the following:

1. Tap the Contacts option.
2. Tap the Options button.
3. Tap 'Phonebook settings' from the list that appears.
4. Tap 'Copy contacts' from the list that appears.
5. Tap either 'From Phone to SIM' or 'From SIM to phone'
6. Tap 'OK'.
7. Tap 'Yes' to confirm that you want to copy all of your contacts.

## Move a Contact or All Contacts

To move a single contact's details to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.
2. Tap the name of the contact whose information you want to move.
3. Select 'Move' from the list that appears.
4. Tap 'Yes' to confirm that you want to move the contact.

To move all of your contacts to your phone or to your SIM card, do the following:

1. Tap the Contacts menu.
2. Tap the Options button.
3. Tap 'Phonebook settings' from the list that appears.
4. Tap 'Move contacts' from the list that appears.
5. Tap either 'From Phone to SIM' or 'From SIM to phone'
6. Tap 'Yes' to confirm that you want to copy all of your contacts.

## Extra Features

All of the features listed in this section are available through in the bottom slide of the main menu.

1. Push the power button on the left side of the Smartwatch
2. Slide left or right in the bottom slide of the main menu
3. Tap the function of your choice



### Files

To access the files on your Smartwatch, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left in the bottom slide and tap 'File'



### Alarm

To set or edit the alarm on your Smartwatch, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the bottom slide and tap 'Alarm'
3. Tap one of the available alarm settings.
4. Tap the #1 field to switch the alarm to On.
5. Tap the #2 field to set or change the alarm time.
6. Tap the #3 field to designate how often the alarm should go off: Once, Everyday, or Custom.
7. If you selected Custom in Step 6, designate the days of the week you would like the alarm to go off.
8. Tap the #4 field to designate the alert type you want to use: Alarm tone or FM radio.
9. Tap 'Done' to save the alarm settings.
10. Tap 'Yes' to confirm that you want to save the settings.



## Stopwatch

To access the files on your Smartwatch, do the following:

1. Push the power button on the left side of the Smartwatch
2. In the main menu, slide left 2x in the bottom slide and tap 'Stopwatch'
3. Tap 'Typical Stopwatch' or 'nWay Stopwatch'
4. In 'Typical Stopwatch' select any or the following options:  
Split timing  
Lap timing  
View records – to view your saved timings.

## Services

All of the features listed in this section are available through the Services menu on the Smartwatch. To access the Services menu, do the following:

1. Push the power button on the left side of the Smartwatch
2. Slide right in the bottom slide of the main menu  
Tap the Services menu that appears.



## Internet Service

To set up and view internet services on the Smartwatch, do the following:

1. Tap the Services menu.
2. Tap the Internet service option in the menu.

The following services are available:

- Homepage— Tap this option to go to the internet homepage you have designated previously. If you have not yet set a homepage, the browser will display automatically display the Yahoo.com page.

- Bookmarks — Tap this option to access your bookmarks.
- **TIP:** To add a bookmark tap 'options' and select 'add bookmark'
- Input Address — Tap this option to enter an internet address, such as [www.carrefour.com](http://www.carrefour.com).
- Recent Pages — Tap this option to view a list of the internet sites you have viewed recently.
- Settings — Tap this option to access the different internet settings you can configure for your Smartwatch. Details on each of these settings are provided immediately below.

**Caution:** Smartwatch is a 2G phone, it can be access to the internet, but the speed of internet depending on the network service from the service provider

## Internet Settings

The following internet settings can be configured for your Smartwatch:

- Homepage – Tap this option to change from default to your own set homepage
- Data account – To select the type of account you want to use from the list of providers
- Browser Options — Tap this option to access the following browser-related functions: Clear cache, Clear Cookies, Clear authentication info.
- Preferences — Tap this option to configure the following preferences:
- Timeout setting — Specify how long you want the internet connection to remain open if the service is not being actively used.
- Show pictures — Specify whether you want to Always or Never show internet pictures on your Smartwatch.
- Cache — Specify whether you want to Enable or Disable caching of webpages on your Smartwatch.
- Cookies — Specify whether you want to Enable or Disable internet cookies on your Smartwatch.

# Specification

FEATURES	Internal Memory	128Mbits Storage / 64Mbits RAM
	External Memory	MicroSD, up to 16GB
	2G Network	850/900/1800/1900 MHZ
BODY	Dimensions Weight	55.25 x 41.15x 14.53 mm 75 grams
DISPLAY	Type Size Color Touch screen	TFT 1.54 Inches 262K Color Yes
SOUND	Alert Types Loudspeaker Micro USB 2.0 Max. output voltage	Vibration, MP3, MP4 Yes Yes ≤150 mV
DATA	GPRS Bluetooth USB	Yes 3.0 +EDR charging and data transfer
Multimedia	Supported memory card Music support MP3 Ringtone FM Radio Stereo Speaker	Max. 16GB Micro SD/T-Flash (Not included) MP3 Yes Yes Yes
Battery	Type Capacity Talk Time Standby	Lithium-polymer 300 mAh 1hr 25 min 127 Hours
Connection	Compatible Operating System Interface	Windows® XP/Vista™/7/8 Micro USB 2.0

Net weight: 75g (phone with battery)

# CONNECTING WITH COMPUTER

## SYSTEM REQUIREMENTS

Your computer system must meet the following requirements:

- Microsoft Windows® XP/Vista™/7
- USB port supported

## COPY FILES FROM COMPUTER

Files can transfer directly into the watch phone by using the USB cable.

1. Make sure the computer is started and entered into the Windows.
2. Connect the watch phone with the USB cable to the available USB port of the computer.
3. Select "Mass storage" and press "ok" to confirm.
4. The computer would detect the watch phone as "New hardware" and install the driver automatically. A new "Removable Disk" will be appearing in "My Computer" after installation finished.
5. Drag and drop the files in the computer to the "Removable Disk".
6. To disconnect the watch phone from computer, double click the Safely Remove Hardware icon on the task bar. Click the USB Mass Storage Device, and then click OK. Then you can unplug the USB cable from the computer safely.

Note: Please do not disconnect the device during loading. It may cause malfunction of the device and files.

## CHARGING THE BATTERY

- Connect the PC USB port and the watch phone USB port.
- When charge, the power sign is shown dynamic. After 3 hours, the power sign will stop moving, and the charge has been completed.
- To stop recharging, disconnect MP3 from PC USB port.

Notes:

- Battery is charging automatically when the device is connecting to a computer which is turn on.
- In order to charge the battery, please make sure the device is in "ON" state. Otherwise the device could not be charging properly.

## IMPORTANT:

- Recommended temperature for battery charging is 0°C to 35°C.
- Fully charge before first time use, or it has not been used for a long period.
- Do not over charge or discharge the player. Over charging or discharging will shorten the battery life.
- The battery could be over discharge if the device is not used for a long time (over three months). To avoid over discharge, fully charge the player every three months.
- Do not disassemble, crush, short-circuit or incinerate your battery as it may cause fire, injury, burns, or other hazards.

## Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your watch phone.

Do not crash, throw, or puncture your watch phone. Avoid the falling, squeezing, and bending of your watch phone.

Do not use your watch phone in a moist environment, such as the bathroom. Prevent your watch phone from being soaked or washed in liquid.

Do not switch on your watch phone when it is prohibited to use or when the phone may cause interference or danger.

For driving safely, only a passenger should operate the device when the car is in motion and not the driver. Laws governing the use of electronic devices by the driver may be applicable in your country and/or jurisdiction.

Follow any rules or regulations in hospitals and health care facilities. Switch off your watch phone near medical apparatus.

Switch off your watch phone in aircraft. The phone may cause interference to control equipment of the aircraft.

Switch off your watch phone near high-precision electronic devices. The phone may affect the performance of these devices.

Do not attempt to disassemble your watch phone or its accessories. Only qualified personnel are allowed to service or repair the phone.

Do not place your watch phone or its accessories in containers with a strong electromagnetic field.

Do not place magnetic storage media near your watch phone. Radiation from the phone may erase the information stored on them.

Keep the product away from direct sunlight. Do not put your watch phone in a high-temperature place or use it in a place with flammable gas such as a gas station.

Keep your watch phone and its accessories away from children. Do not allow children to use your watch phone without guidance.

Use only approved batteries and chargers to avoid the risk of explosion.

Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.

Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your watch phone or PC may be damaged.

This manual is for reference only, please refer to the material object as standard.

Use a dry soft cloth to clean the product; do not use water, alcohols, detergent or any chemicals

Please backup any important data, repair or other causes may result in data loss.

Do not disconnect the product during memory formatting or file transfer operations. Otherwise, it may cause program failure or files damage

## Power supply & Charging

Only use the accessories supplied with the appliance. The use of incompatible accessories may have serious consequences and permanently damage your phone.

The apparatus should be used in a moderate climate.

The phone is built with an internal rechargeable battery; do not expose the product to excessive heat such as sunshine, fire or the like.

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.

The battery is to be disposed of safely.

Battery contains materials which are hazardous and harmful for the environment.

When disposed the battery, do not short circuit the + and – terminals of battery

Please return the used battery to a suitable collection facility for environmentally friendly disposal.

Do not plug or unplug USB port with wet hands – risk of electric shock.

## Medical device

Implanted medical device such as pacemaker may be affected by the product.

Avoid potential interference emitted from the product to the implanted medical device, keeping the product at least 20 cm away from the medical device.

Do not carry the product in the breast pocket.

Turn off the product immediately if you suspect any interference.

## Hearing protection

This phone respects the current regulations for limiting the maximum output volume. Prolonged earphone listening at high volume could lead to hearing damage!

Stop using the product or lower the volume if you feel your ears ringing.

Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.

Excessive sound pressure from earphones and headphones can cause hearing loss.

To prevent possible hearing damage, do not listen at high volume levels for long periods.





## Copyright

This product is for private use only. Copying CDs or downloading music, video or picture files for sale or other business purposes may be a violation of copyright law. Copyrighted materials, works of art and/or presentations may require authorization to be fully or partially copied or recorded. Please be aware of all such applicable laws concerning the recording and use of such contents for your country and jurisdiction.

## Maintainence

Take care of the screen. The screen is covered with a glass layer that may be scratched or broken.

To clean fingerprints or dust from the screen, it is recommended to use a soft, non-abrasive cloth such as a camera lens cloth to clean the screen.

## Declaration of Conformity

Hereby, Carrefour declares that this device[GSM, Bluetooth, GPRS, EDGE watch Phone: SSW02] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The declaration of conformity may be consulted at: CMI - 2 Avenue du Pacifique - Les Ulis - 91940 COURTABOEUF Cedex FRANCE